


INSTALLATION AND CARE GUIDE

Voice Activated Smart Toilet

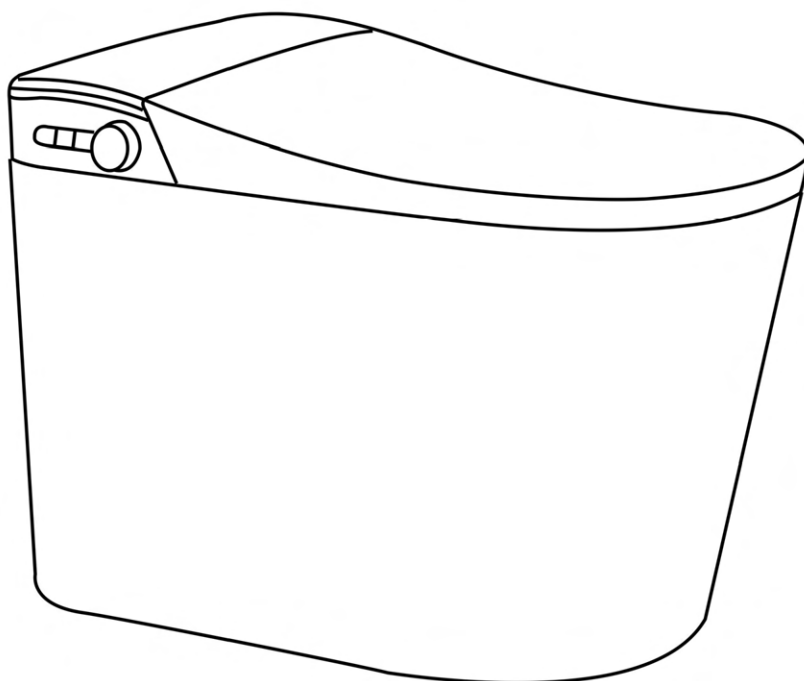



BEFORE UNPACKING THE PRODUCT, READ ALL INSTRUCTIONS CAREFULLY

INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

CAUTION



**TWO PERSON
LIFT REQUIRED**

**2 PEOPLE ARE REQUIRED TO LIFT AND DURING
ENTIRE INSTALLATION OF THIS PRODUCT**



**INSTALLATION OF THIS PRODUCTS BY AN
INEXPERIENCED INSTALLER MAY RESULT
PERSONAL INJURY OR DEATH!**



We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

Failure to follow these instructions may result in death or serious injury due to incorrect handling or installation of the product. Ensure that at least two people are available to lift the product during installation. The installation of this product by an inexperienced installer may result in personal injury or death.

Please note that we reserve the right to change, update, modify, alter, or redesign this manual/product or its policies without prior notice. We shall not be liable for any injuries or property damages in connection with installation or use of this product.

This product must be installed by a fully insured and licensed plumber only. Installation by anyone other than a fully insured and licensed plumber shall void the limited warranty. We recommend that the licensed plumber have experience in installing our products.

Please note that the limited warranty is void for any commercial installation. We are not responsible for local code compliance for this product. Building and plumbing codes may vary, so it is the customer's responsibility to ensure compliance.

Under no circumstance shall we be liable for any incidental damages sustained in connection with this product. Neither the manufacturer, distributor, nor retailers responsible for water damage or flooding caused due to the use of this product. Under no circumstances shall we be liable for any fees, costs of installation/reinstallation/removal, subsequent damage, or transportation in case of product defects.

TOOLS REQUIRED FOR INSTALLATION



Soft Cloth
or Blanket



Silicone



Silicone/
Caulk Gun



Tape
Measure



Pencil
Marker



Safety
Glass



Knife



Adjustable
Wrench



Channel
Lock Pliers



Adjustable
Socket Extension



Philips
Screwdriver



Level



Putty Knife

IMPORTANT SAFEGUARDS

When using electrical products, especially in the presence of children, always follow basic safety precautions, including the following:

1. Do not use the appliance if you have reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless you have been given supervision or instruction.
2. Ensure that children are supervised and do not play with the appliance.
3. This appliance can be used by children aged 8 years and above, as well as persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved.
4. Children should not play with the appliance.
5. Cleaning and user maintenance should not be carried out by children without supervision.

READ ALL INSTRUCTIONS BEFORE USING



DANGER –To reduce the risk of electrocution:

1. Do not use the product while bathing.
2. Do not place or store the product where it can fall or be pulled into a tub or sink.
3. Do not place the product in or drop it into water or other liquid.
4. If the product falls into water, unplug it immediately and do not touch it until it has been examined and repaired by a qualified service center.
5. Do not wash the main unit or electrical plug with water or detergent.
6. Do not handle the electrical plug with wet hands.
7. Do not put your hand or any other object over the outlet of the air dryer or block the outlet of the air dryer.
8. Never disassemble, repair, or modify this product.
9. During installation, disassembly, repair, and maintenance of the product, the power plug must be switched off and the water supply shut off.



WARNING –To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used by, on, or near children or individuals with disabilities.
2. Use this product only for its intended purpose, as described in this manual. Do not use attachments that are not recommended by the manufacturer.
3. Do not operate this product if it has a damaged cord or plug, is not working correctly, has been dropped or damaged, or has been dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never use the product while sleeping or drowsy.
6. Never drop or insert any object into any opening or hose.
7. Do not use this product outdoors or operate it where aerosol (spray) products are being used or where oxygen is being administered.
8. Connect this product to a properly grounded outlet only. See Grounding Instructions.
9. Do not throw cigarettes or other burning objects into the toilet, as it may cause a fire.
10. This product is an electrical appliance and must be placed far away from water. Do not allow urine or other liquids to come into contact with the product.
11. Do not lay the product on its side or upside down during the electrical circuit.
12. It is prohibited to use other electrical appliances in the same socket.
13. It is forbidden to use a power extension or an unstable, loose outlet.
14. The old, aging water supply hose cannot be used, as it may cause leakage, fire, or electrical shock. The installation of the bidet seat should include specified components and a new water supply hose.



CAUTION – Indicates that failure to follow the instruction may cause body injury or property damage.

1. Do not install or use the product in wet places as steam room etc. This product must be connected to properly grounded power outlet socket.
 2. It is recommended to use a waterproof electrical outlet that should be installed in a place where it is not easily wet.
 3. This product should only be used with AC 110V-220V, 50/60Hz electrical current and a load current of at least 15A. The power plug must be equipped with a ground fault circuit interrupter or ground fault electrical leakage protector, or a similar high-sensitive, rapid-type leakage switch (rated sensitive current under 6mA).
 4. When there is thunder, it is strongly recommended to pull out the power plug.
 5. Do not stand on the ceramic toilet.
 6. The ceramic toilet must be installed on floor.
 7. Do not stand on the product unit, seat, and cover.
 8. Do not lean against the seat cover when using the product to avoid damage.
 9. This product is equipped with a soft-closing seat cover. Heavy pressing or pushing may damage the soft-closing damper.
 10. Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser, or scrubbing brush to clean the product.
 11. Exposure to direct sunlight is prohibited.
 12. Only use tap water or bottled water. Otherwise, it may cause chafing.
 13. Do not connect the water supply to the heater outlet. Make sure the inlet water temperature is between 3~35°C.
 14. When the room temperature is below zero degrees, please dry up the water tank to avoid freezing.
 15. Raise the restroom temperature to prevent the toilet from being damaged due to freezing.
 16. When moving the product from a cold or wet environment into a normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from an electric short-circuit.
 17. When not using the product for over three (3) days, drain the water out of the container and pull the electrical plug from the wall outlet.
- ELECTRONIC BIDET TOILET
18. Stop using the product and shut off the power when the product malfunctions. Please contact the service people for professional service.

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.






DANGER – Improper use of the grounding plug can result in a risk of electric shock.


If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product is factory-equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

Main Unit	Rated voltage	AC 110V-120V,50/60Hz AC 220V- 240V,50/60Hz
	Rating power 1	1 200W-1400W
	Water pressure range	Minimum water pressure 0.3MPa Maximum water pressure 0 . 7 MPa
	Wire length	1.5m
Toilet	Flush volume	4 L
	Flushing mode	Siphon
	Wall to outlet pipe distance	12 inches / 30 cm
	Outlet outside diameter	3.5 inches / 9 cm
	Drainage method	Vertical outlet
Cleaning device	Heating power	1200W
	Water temperature	Four levels of adjustable
	Water volume	Four levels of adjustable
	Cleansing mode	Rear cleaning/Female cleaning/Massage cleaning
	Spray cleansing location	Three levels of adjustable
	Water pressure protector	Stable pressure, automatic pressure relief
	Anti fouling device	Quick flush, automatic cleaning nozzle, anti siphon, anti back flow, filter air and water
	Safety device	Temperature sensor,fail safe,thermostat, temperature fuse,ground protection, leakage protector
Drying device	Warm wind speed	Over 4 M/S
	Warm wind temperature	Four levels of adjustable
	Heating power	22 0W
	Safety device	Temperature sensor, thermostat,temperature fuse
Heated seat	Surface temperature	Four levels of adjustable
	Heating power	35W
	Open and close device	Quiet soft-closing device, automatic open and close the seat
	Heated burning protection	The seat temperature will automatically lower to 34°C after 10 minutes. Automatic close the heated if temperature over 48 °C
	Safety device	Seat sensor, Temperature sensor, Thermostat, Temperature fuse
Caring device	Night light assembly	Intelligent power saving. If nobody use toilet, the night light will automatically off. The screen will automatically turns off and the foot sensor automatically turns on.
	Automatic flushing	Toilet will automatically flush as user walks away from toilet
	Auto lid open/ close(optional)	Intelligent open/close the lid or by remote control

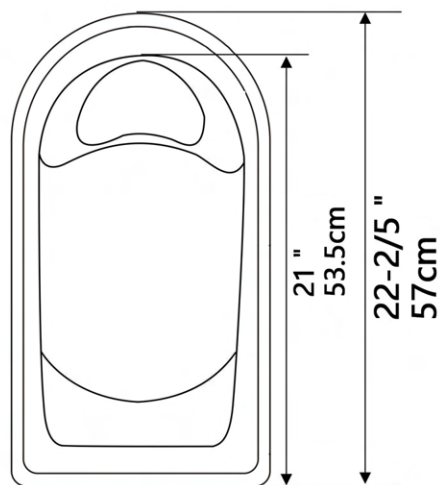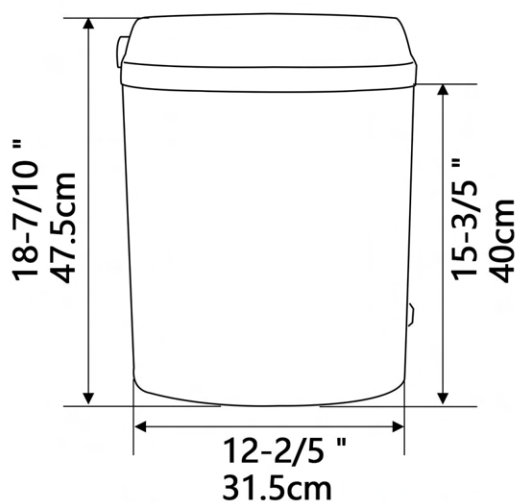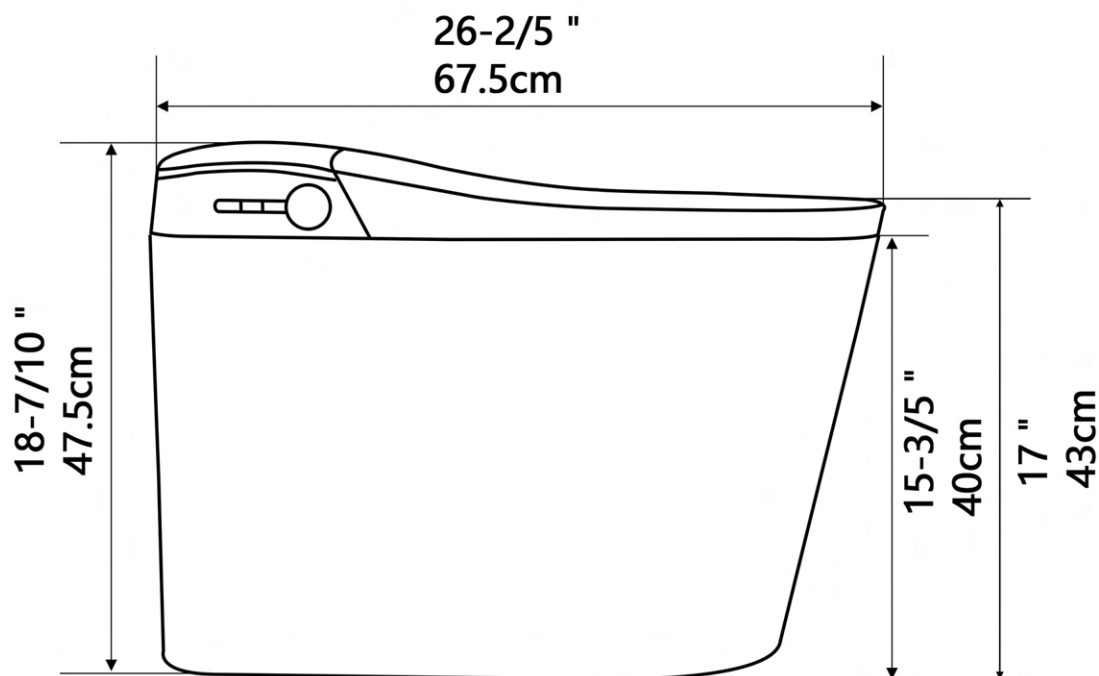


- 1.The product image is for reference only and may not accurately reflect the appearance of the actual product. We reserve the right to modify the appearance of the product without prior notice.
- 2.In the event of any changes to the appearance of the product, the actual product shall prevail over the product image.

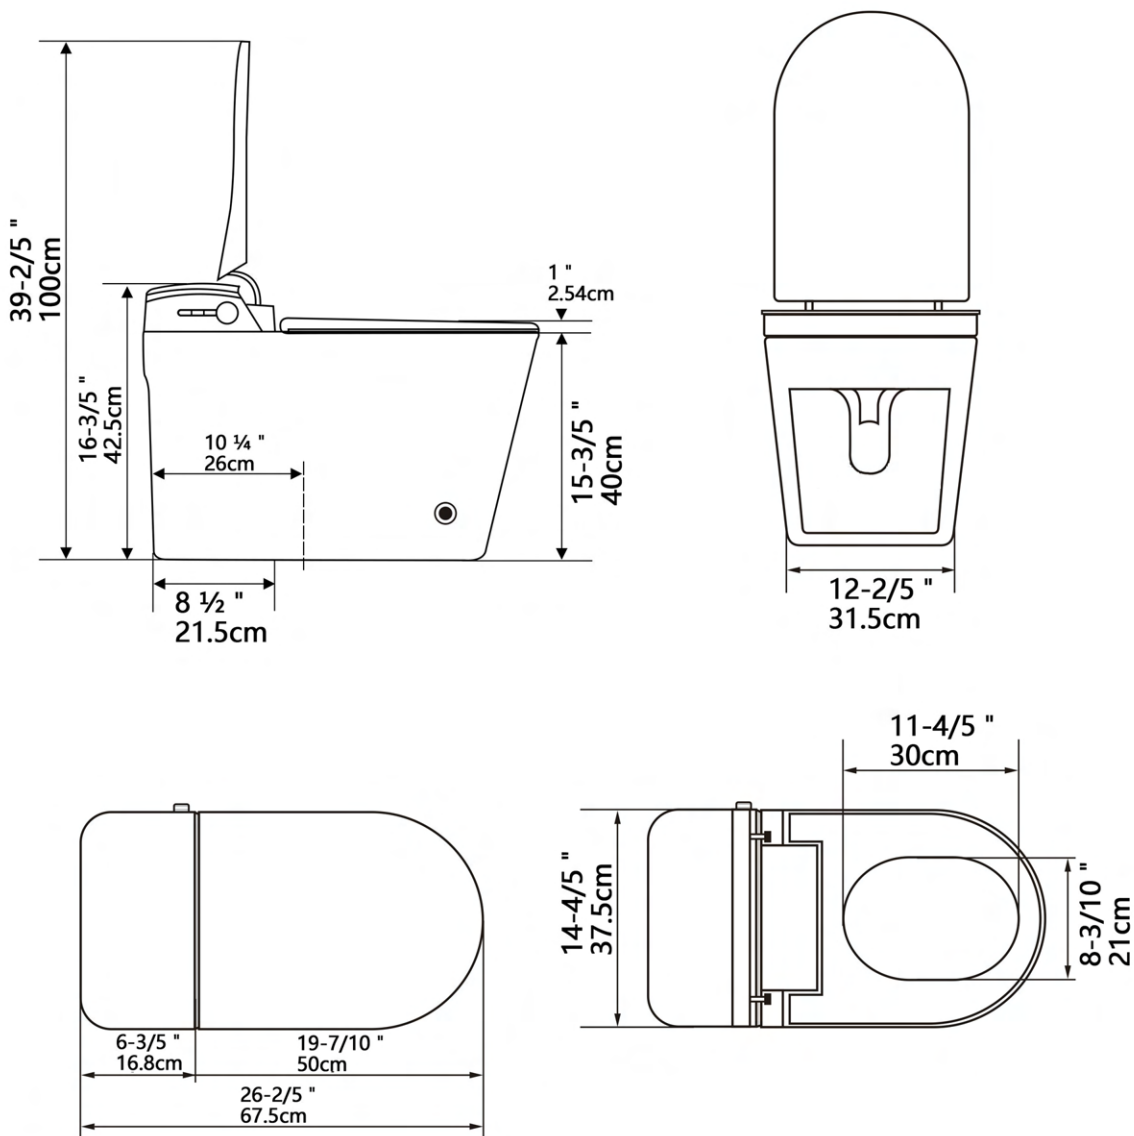


IMPORTANT INFORMATION

- Measurements are subject to a tolerance of +3/8" and may change without notice.
- Specifications and configurations are subject to change without notice.
- Please measure the toilet on-site before installation.
- Please note that the installer(s) must be certified, or the warranty will be voided.
- The measurements provided in this document supersede all others published prior to the publication date shown below.


Installation Option

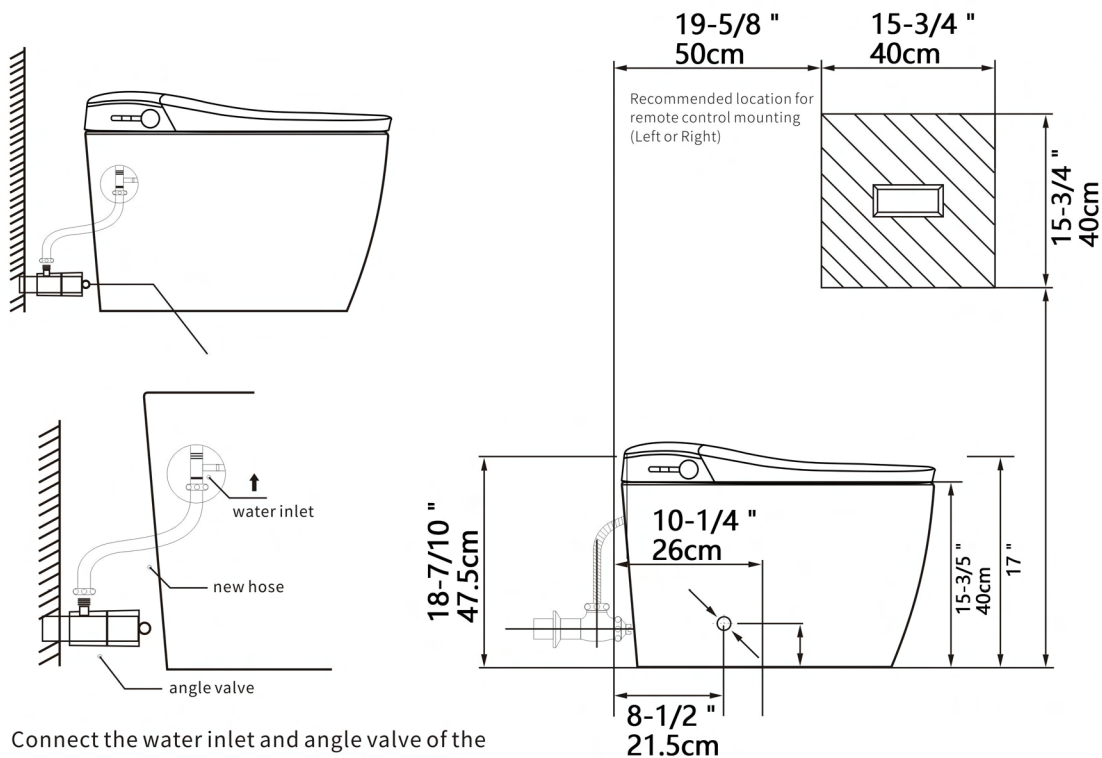

- Connect the water inlet and angle valve of the toilet with the matching hose and tighten it

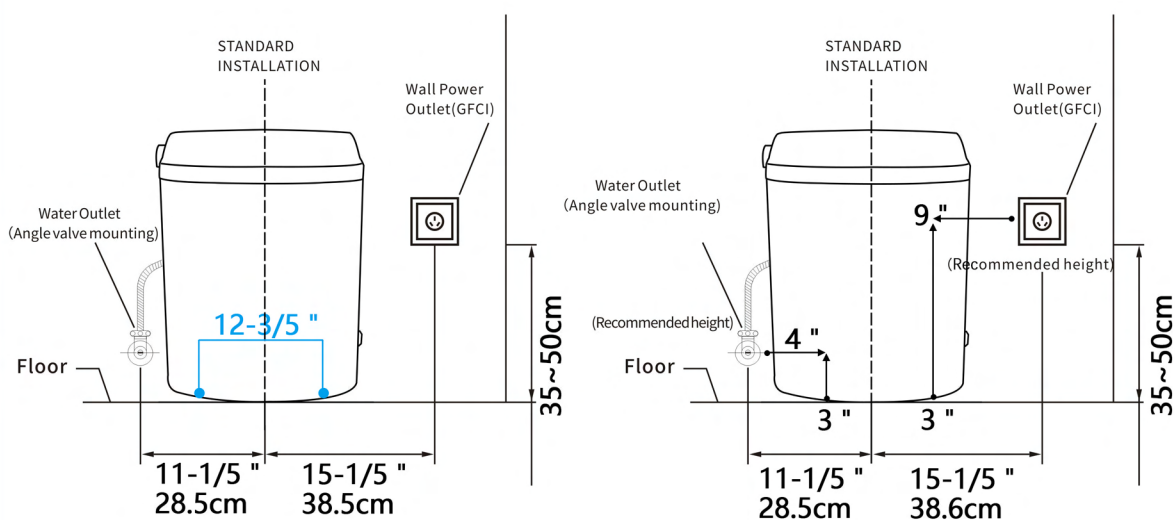


Overall sketch

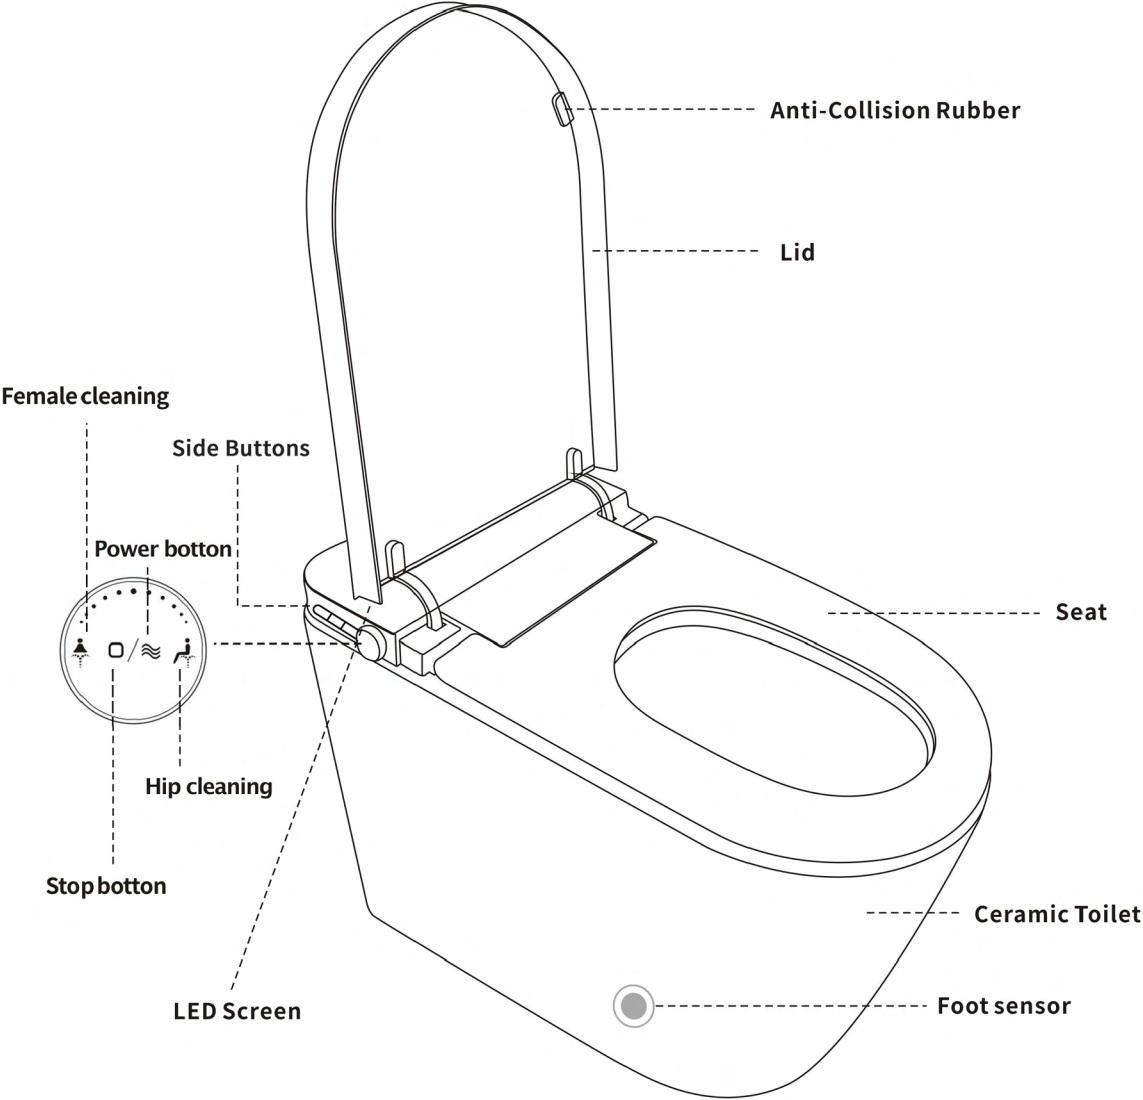

Before Installation

1. Turn on the angle valve and check the thread connection to ensure there is no leakage.

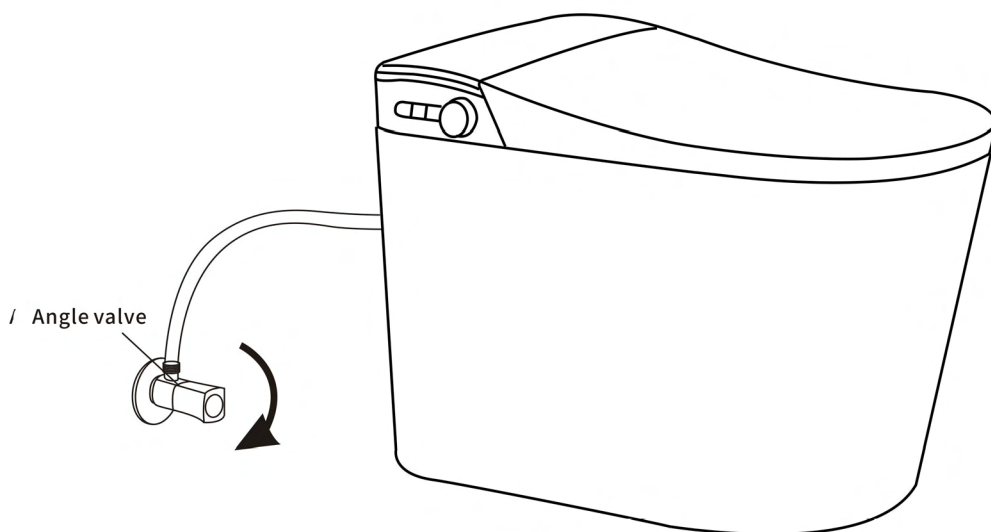

2. Power Connection

- Insert the power line leakage protection plug into the power socket, press the reset switch, and check that the plug indicator lights up, indicating that power is on.


Tips:

Press electric leakage test button prior to usage, the reset switch pops up indicating that the leakage protection function is normal.

Press the TEST button (then RESET button) every month to assure proper operation.

*Suitable for the product with a leakage protection plug.

*Please refer to the actual product manual for details.

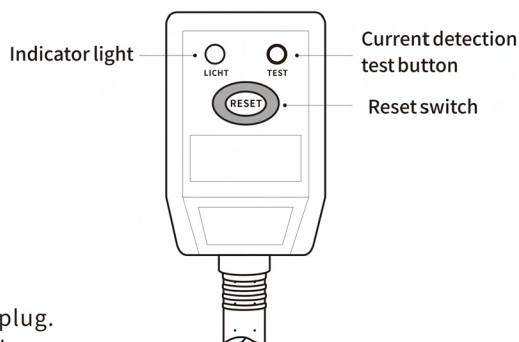



3. Self-inspection

1. The main unit buzzer rings first "click," and the power indicator (POWER) and energy-conservation indicator (ENERGY SAVER) flash. The power indicator lights on, and the energy-conservation indicator turns off to start self-inspection.
2. The main unit buzzer rings a second "click" to indicate the completion of self-inspection. The power indicator remains on, and the energy-conservation indicator remains off.
3. Start the function mode for normal usage.

Installation of ceramic toilet


1. Water supply angle valve installation

- Draw the centerline of the drain outlet on the floor, and install the angle valve at the appropriate position on the wall according to the dimensions of the toilet. A position that is 10" off-center is preferred.

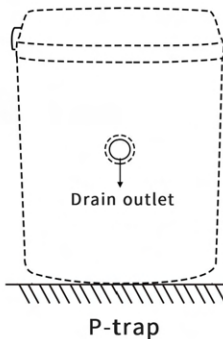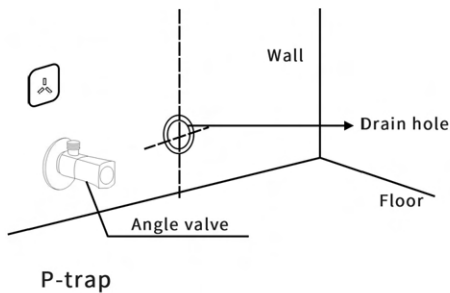


2. Toilet Installation for P-trap 180mm

- Apply silicone sealant evenly to the top and bottom surfaces of the flange seals. Install flange seal on toilet hole. Apply one side with silicone sealant to the drain pipe, and attach the flange seals. The other side of the drain pipe is connected to the drain outlet on the wall and apply with silicon sealant.

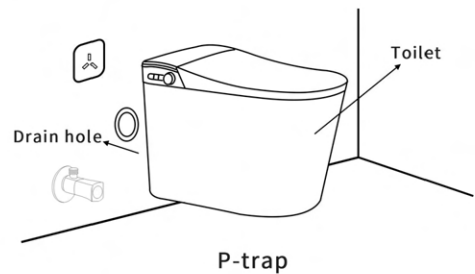


3. Apply silicon sealant into the gap between the bottom of the toilet and the floor.

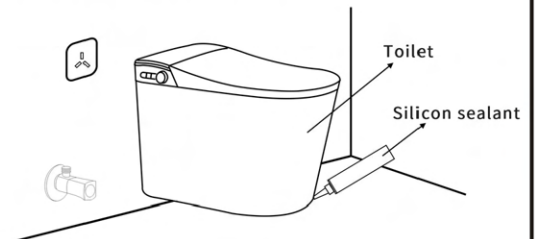

5. Silicone caulking application



- Apply Silicone caulking to the edge of toilet base, wipe away any excess.

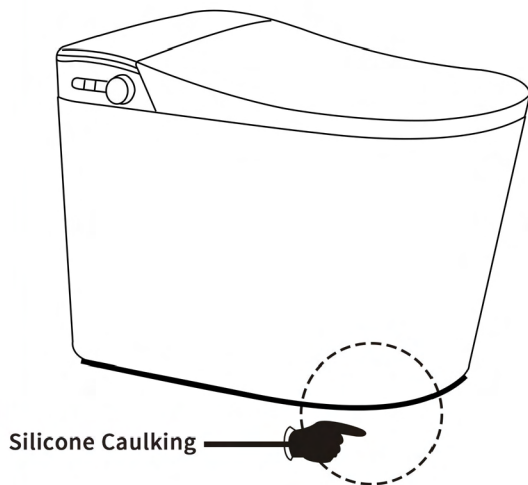

- Note:
Please clean the drain outlet;
Please make sure ceramic toilet outlet sits perfectly on drain outlet.

6. Installation of hose

- Connect water inlet and angle valve with new hose.

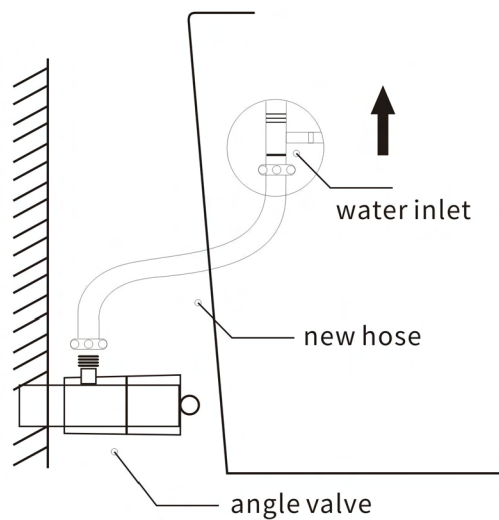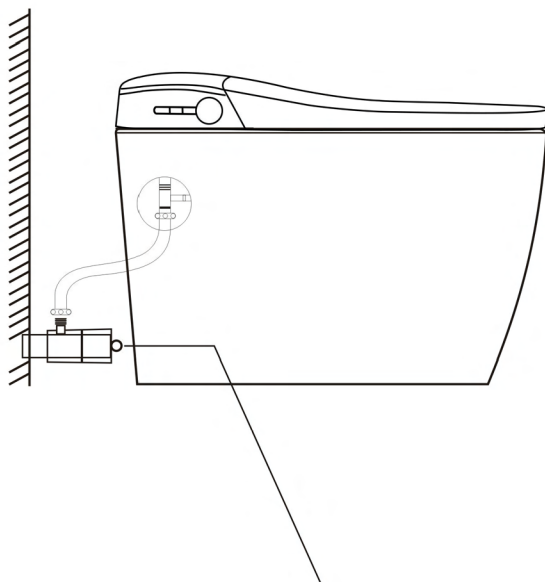

Daily maintenance

Main unit care and maintenance


- 1.Shut off power supply before maintenance.
- 2.Lift the seat upward, press down the button located on the right side of the main unit and pull out the seat. Wipe the stains with a soft damp cloth.




- 3.Safety self-inspection:
After cleaning, reconnect the toilet with the power supply.
Spray nozzle maintenance and care
- 4.Spray nozzle maintenance and care:

Spray nozzle maintenance and care

- 1.Nozzle self-cleaning: Press the "nozzle cleaning" button, and the nozzle will move forward and self-clean.
- 2.Spray nozzle disassembly:
When the wand moves forward, the nozzle can be disassembled for cleaning.

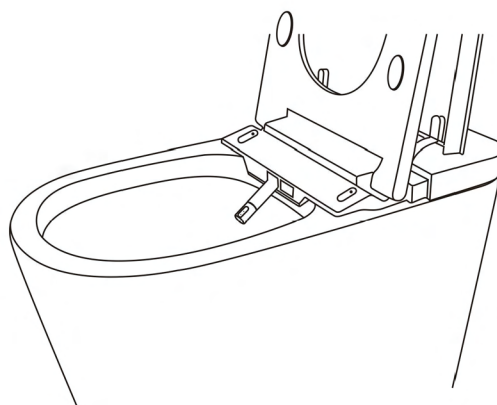

- 3.Use a soft cloth or soft brush to clean.
Do not pull or push the wand to avoid damage.

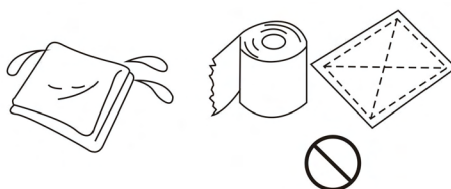


- 4.Nozzle assembly:
Reinstall the nozzle to the wand and press the "nozzle cleaning" button.
The nozzle will move back to the original position.

Emergency Troubleshooting

1. Power failure


- Manually press button of full/half flush to perform the toilet flushing.

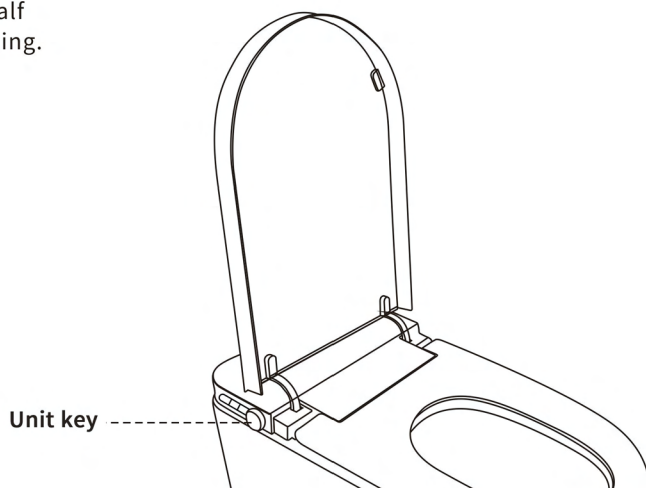

2. Water failure

- Pour approximately 8 liters of water into a barrel and flush the ceramic bowl.


Note: Be careful not to spill water from the bowl.

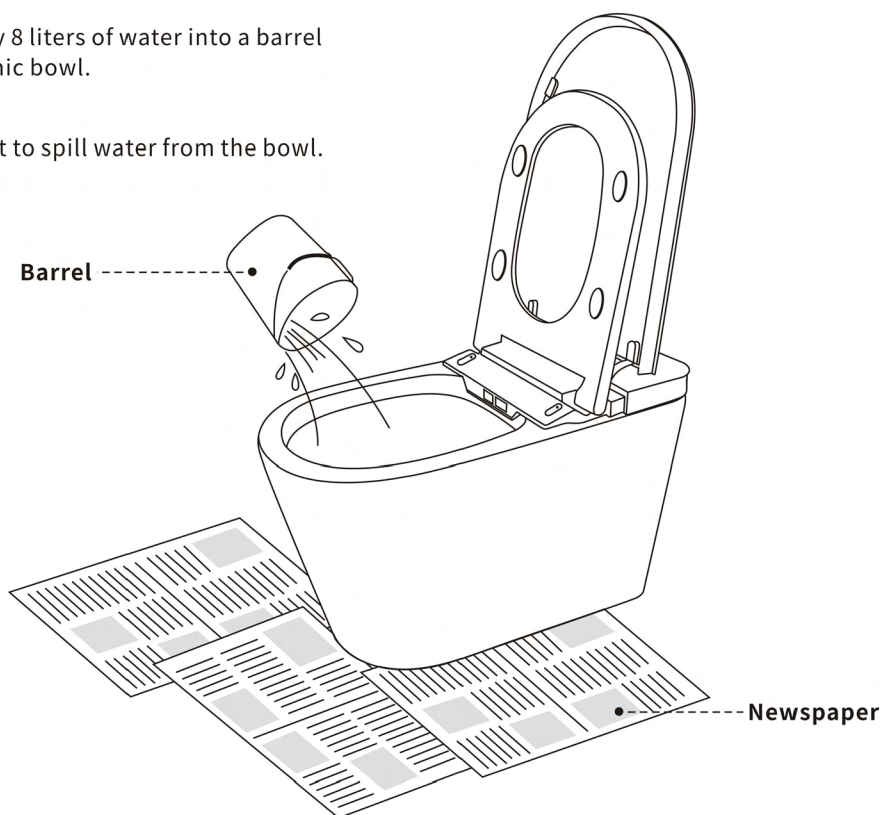

Failure of remote control

1. Operate the panels on bidet seat to perform.

2. Turn the seat upward open, press down the button located on the right side of main unit and pull out the seat. Wipe the stain with a soft damp cloth.

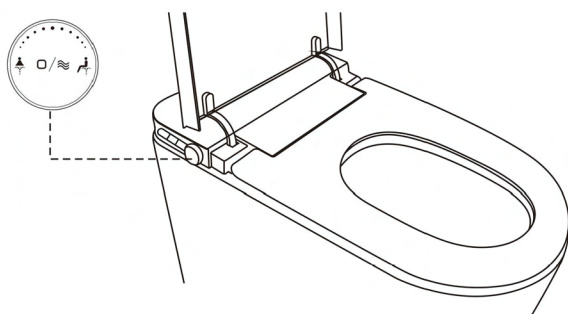

2. Battery replacement

- Press the “power” button on panel and electricity indicator will turn off
- Take remote control from hanger
- Remove the remote control from the hanger, open the battery cover, replace the battery, and put it back on the hanger.
- Press the “power” button again and electricity indicator will turn on.

Remarks : When replacing the battery, the automatic function and timing function will be cancelled and need to be reset.


When the product is left unused for a long time

- Especially during the winter season the water inside the tank should be drained to avoid freezing.

To discharge water

1. Turn off the water supply angle valve
2. Cut off the electricity
3. Discharge water

- Slightly press inward the discharging button to discharge water.

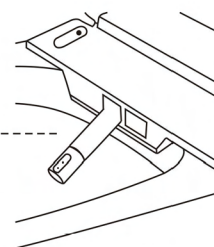

4. Handle the remaining water in bowl

- It is suggested to put some antifreeze into water inside the bowl.



Note : Before water discharging, the power must be cut off!

Screen Sign



	• Lights up during seating. Light flash when leaving the seat.
	• Lights up during drying. Light off when stop drying.
	• Light flash during adjusting water temperature. Light off when stop adjusting.
	• Water temperature degree , wind temperature degree, seat temperature degree, displayed with number.
	• Light flash during adjusting the seat temperature. Lights up when stop adjusting.
	• Light up during pressing the ECO button. Light off when out of use.
	• Light flash during pressing the filtrate button. Light off when out of use.
	• Light flash during flushing. Light off when out of use.

Side Buttons




- Short press “ ” to start spiral flushing;
Long press to turn on/off the automatic UVC sterilization.
- Short press “ AUTO ” to start Automatic mode;
Long press to turn on or off the atmosphere light.
- Short press “ ” to start children cleaning mode.



- Short press “ ” to start drying while sitting
Short press “ ” to start trtflushing when not seated
Long press to enter standby mode when not seated
- Short swift “ ” to start female cleaning
Short swift to female cleaning again: switch to movable cleaning
Long Swift to female cleaning to turn on the water pressure massage
- Short swift “ ” to start hip cleaning
Short swift to hip cleaning again: switch to movable cleaning
Long Swift to hip cleaning to turn on or off the infrared therapy


Remote Control Key Schematic

Controller A.

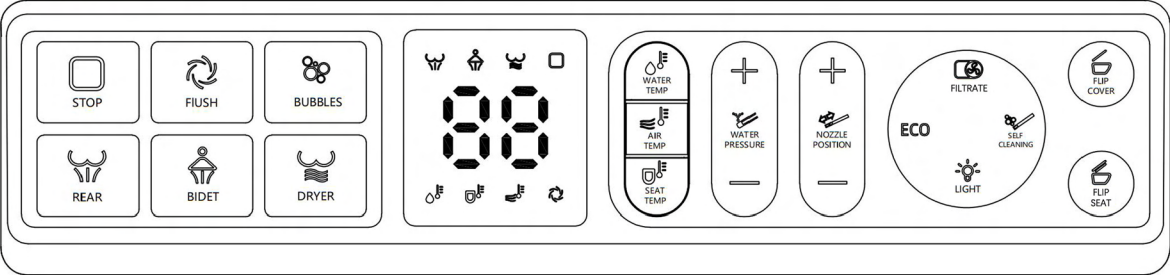

	STOP	Press the button to stop Long press the button to enter standby mode
	FLUSH	Press the button to flush the toilet Long press the button to open/ close the automatic flush
	BUBBLES	Press the button to flush with bubbles Long press the button to open/ close the bubbles flushing function
	REAR	Press the button to start hip cleaning Press the button again, it will cleaning in all directions Long press the button, turn on/ off Children's cleaning mode
	BIDET	Press the button to start female cleaning Press the button again, it will cleaning in all directions Long press the button, turn on/ off Children's cleaning mode
	DRYER	Press the button to start drying Long press the button, on/ off automatic flushing when lid is closed
	WATER TEMP	Press the button to change the water temperature
	AIR TEMP	Press the button to change the air temperature
	SEAT TEMP	Press the button to change the seat temperature
	WATER PRESSURE	- Press the button to increase the water pressure of the nozzle Long press the button to adjust the flushing time - Press the button to decrease the water pressure of the nozzle Long press the button can make the water spiral, it will cleaning in all directions
	NOZZLE POSITION	- Press the button to increase the length of the nozzle Long press the button to start the full cleaning mode - Press the button to decrease the length of the nozzle Long press the button, adjust the sensor distance. Press the water pressure+ or water pressure - button to adjust the sensor distance. The screen will shows the number 1-5, level 5 can can sense people at greater distances


	FILTRATE	• Press the button to filtrate Long press the button, turn on/ off the automatic deodorization when seated
ECO	ECO	• Press the button to start eco Long press the button to empty internal bubble liquid
	LIGHT	• Press the button to turn on/ off the night light Long press the button to on/ off eco
	SELF CLEANING	• Press the button to cleaning the nozzel Long press the button to turn on/ off the UV light
	FLIP COVER	• Press the button to open/ close the toilet cover
	FLIP SEAT	• Press the button to open/ close the toilet seat

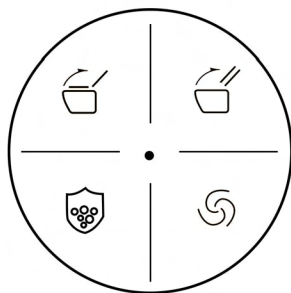

Controller B.

	FLIP COVER	Press the button to open/ close the toilet cover.
	FLIP SEAT	Press the button to open/ close the toilet seat.
	BUBBLES	Press the button to flush with bubbles.
	FLUSH	Press the button to flush the toilet.

Controller connected to the smart toilet

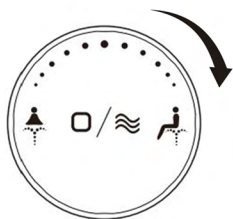

Controller A

- Step 1. Plug in socket to start the smart toilet.
- Step 2. Press TEST button to disconnect the power supply.
- Step 3. Press RESET button to reconnect the power supply.
- Step 4. During the start initialization process.
Wait until the unit key in white light.
- Step 5. Long swift to hip cleaning.
Wait until the unit key in blue.
Move your hand away from the unit key.
- Step 6. Press any button on the controller A.

After hear "beep" sound and the light turns into white color, complete setting.

Controller B

- Step 1. Wait until the unit key in white light.
Long swift to female cleaning.
- Step 2. Wait until the unit key in green light.
Press any button on the controller B.

After hear "beep" sound and the light turns into white color, complete setting.

Troubleshooting Guide

Problem	Cause	
No automatic open the lid	This feature is turned off by default	Long press the seat button, when hear “beep” twice time means open the automatic
Automatic open the lid	Lid automatically open when close to the toilet	Long press the seat button, when hear “beep” once time means close the automatic
No flushing	water supply hose buckling causes block	solve the buckling
	fill valve is off	turn on the fill valve
	Water supply is cut off	Connect water supply and wait for the water
Poor flushing	Water supply hose buckling causes partial block	Solve the buckling
	Fill valve is not fully turned on	Fully turn on the fill valve
	Filter is dirty and causes block	Clean the filter
The water is not hot	The water temperature is setted on normal temperature level	Reset the watertemperature
Seat temperature is not hot	The seat temperature is setted on normal temperature level	Reset the seat temperature
	In standby mode	Shift to function mode for 3 minutes
Wind temperature is not hot	The wind temperature is setted on normal temperature level	Reset the seat temperature
No wind out	In standby mode or power save mode	Shift to function mode to use dry function
Spray wand cannot retracted	Power off	Push back the wand lightly and wait for the power
	Get stuck by impurities	Clear away the impurities
Spray wand cannot stretch out	Power off	Push back the wand lightly and wait for the power
	Do not sit in sensing area	Sit right in the sensing area
Controller cannot display	Reverse the polarity of battery	Reload the battery
Controller Not Work	Make sure the power connect	
	If the controller still does not work,please refer to the details and try the above instructions again.	
 Caution	If the problem cannot be solved using the above methods, please turn off the power and contact the service provider for maintenance.	
	If the leakage circuit breaker trips frequently,it means that the product has an electricity leakage,so please turn off the power and contact the service provider for maintenance	

Voice Commands

Activation Phrase

- Hey Smarter


Instruction Commands

- Hip Cleaning
- Female Cleaning
- Function Stop
- Start Drying
- Turn on the Night Light
- Turn off the Night Light
- Open the Lid
- Close the Lid
- Open the Seat
- Close the Seat
- Open the Radar
- Close the Radar
- Full Flush
- Warm Water
- Cold Water
- Warm Air
- Cold Air
- Tube Forward
- Tube Backward
- Increase the Water Power
- Reduce the Water Power
- Clean the Nozzle
- Start Massage
- Stop Massage
- Move Clean
- Stop Move
- Turn Up the Volume
- Open the Voice
- Close the Voice
- Turn on the Ambient Light
- Turn off the Ambient Light
- Open Bubble
- Children Cleaning
- Open Eco
- Close Eco
- Open Filtration
- Close Filtration
- Start Auto Cleaning
- Stop Auto Cleaning

Say *"Hey Smarter"* to activate voice control mode



"Hey"

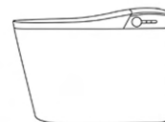

"Opening the lid"



"Warm water on"

