




5-WAY HI-FLOW SHOWER VALVE (81JS) INSTRUCTIONS

PARTS LIST

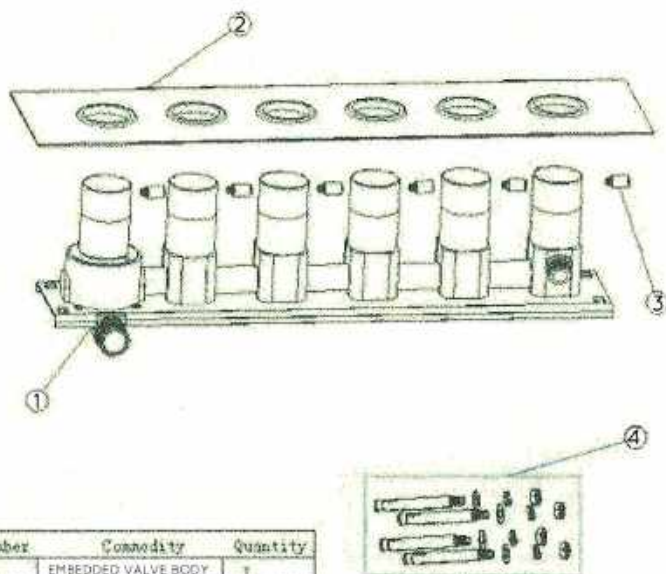


Number	Connectivity	Quantity
1	EMBEDDED VALVE BODY	1
2	FACE PLATE	1
3	CONTROL LEVERS	6
4	EXPANSION SCREWS	4


ASSEMBLY DIAGRAM

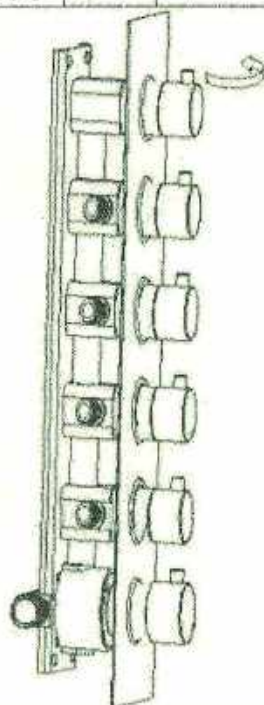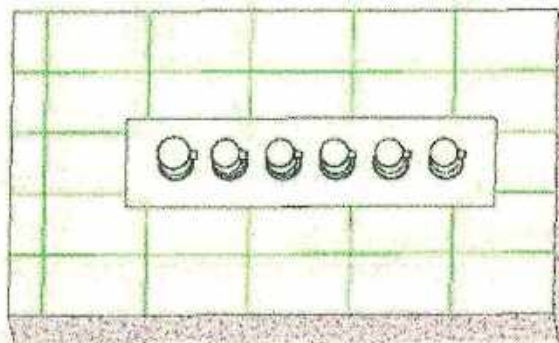

1. RELEASE THE SIX HANDWHEEL LEVERS
ACCORDING TO ABOVE DIRECTIONS


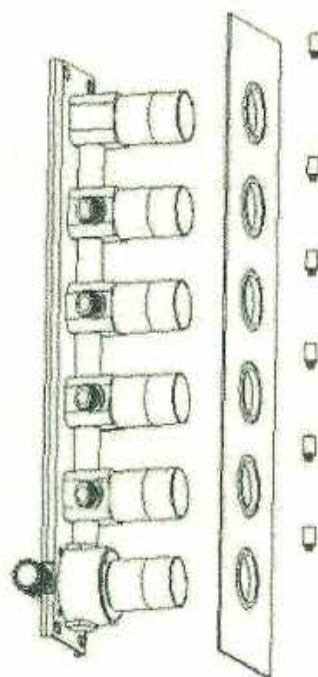


2. TAKE APART THE INTERNAL FACEPLATE
AND CONTROL LEVERS

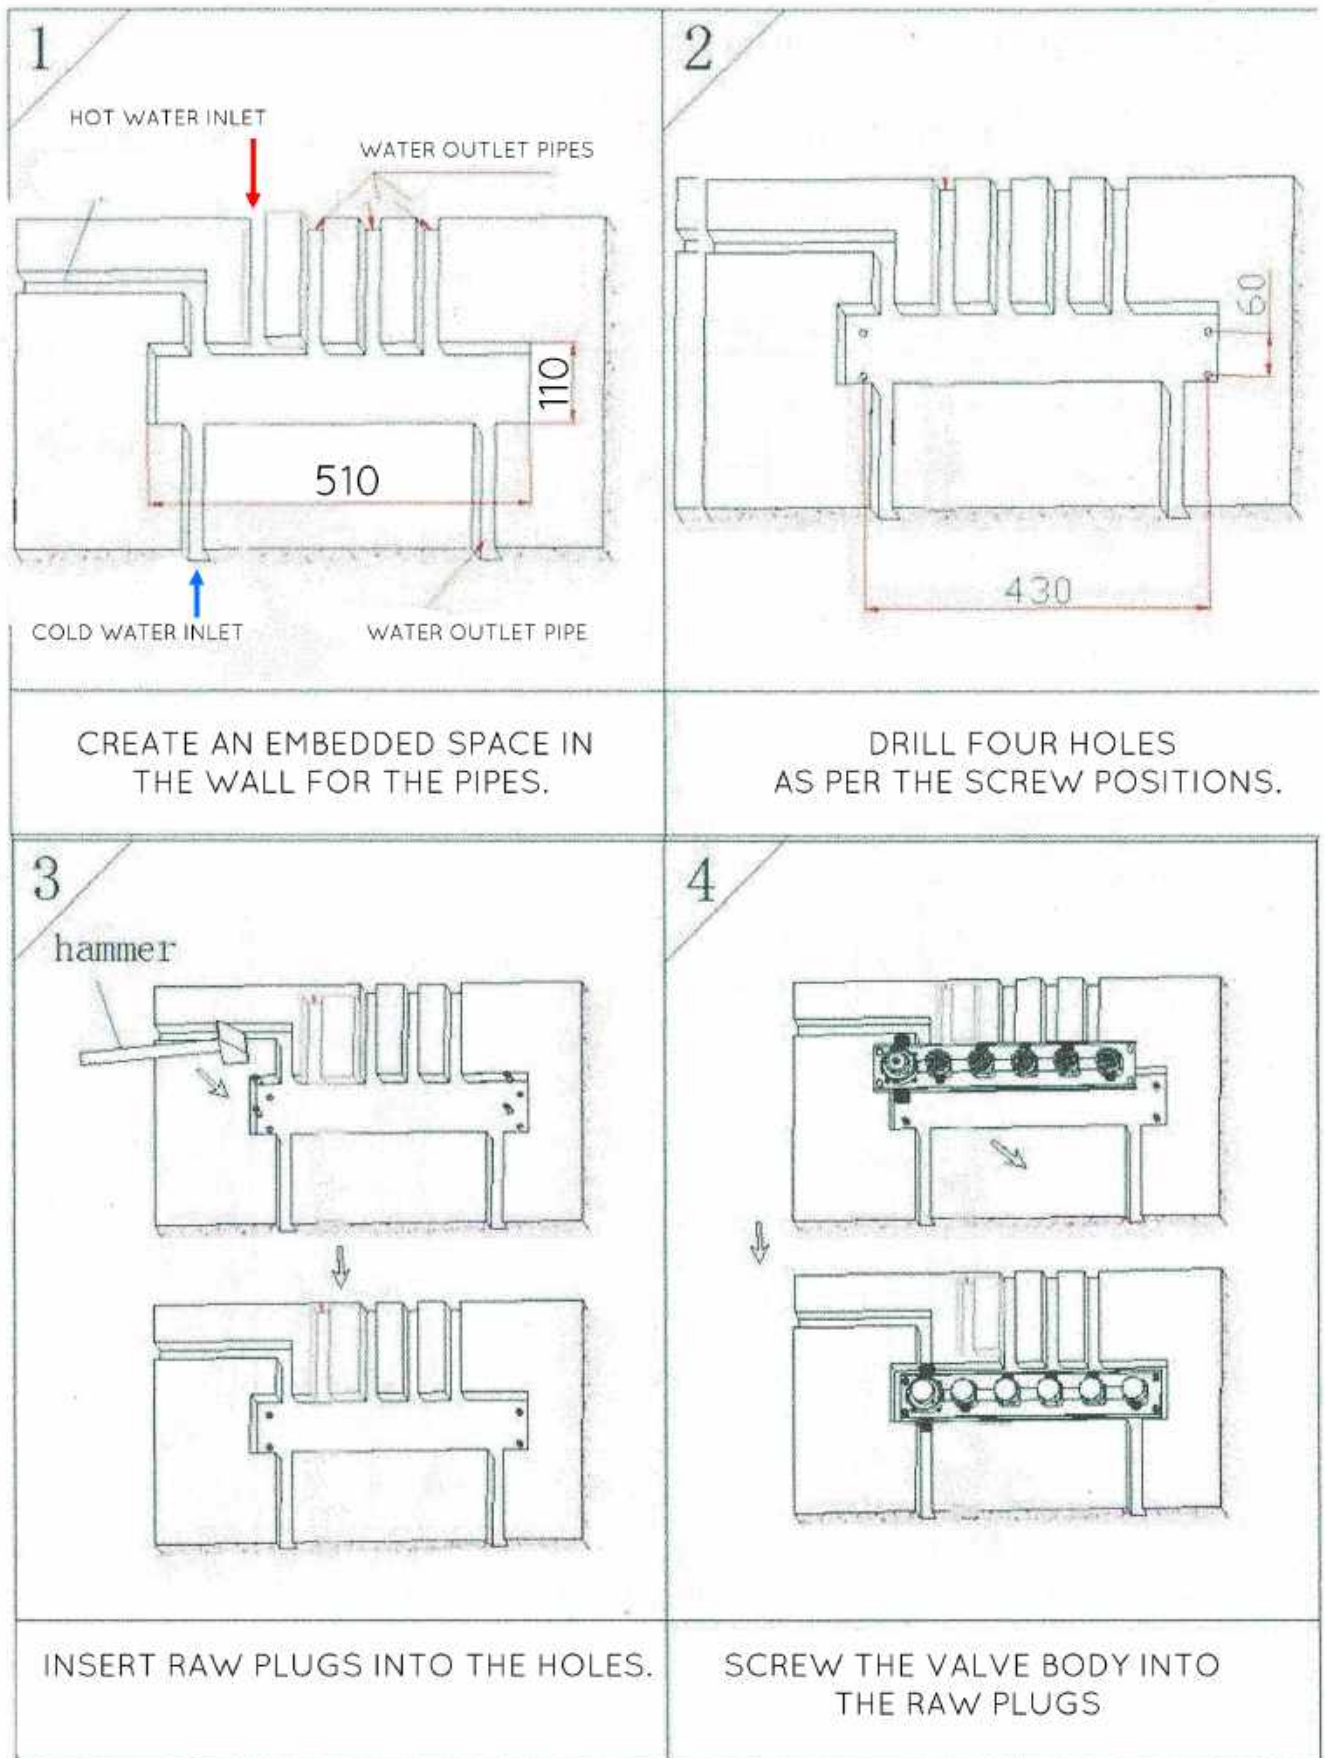


5

Copper sleeve

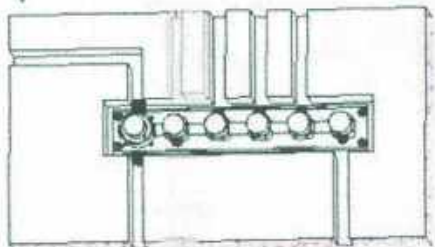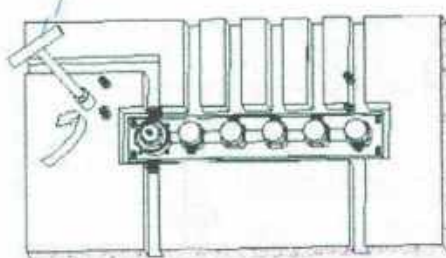



IDENTIFY THE SCREWS AND PLACE WASHERS ON THEM. USE A COPPER SLEEVE WRENCH TO SECURELY TIGHTEN THE SCREWS, ENSURING THE VALVE BODY IS FIRMLY FIXED IN PLACE.

6

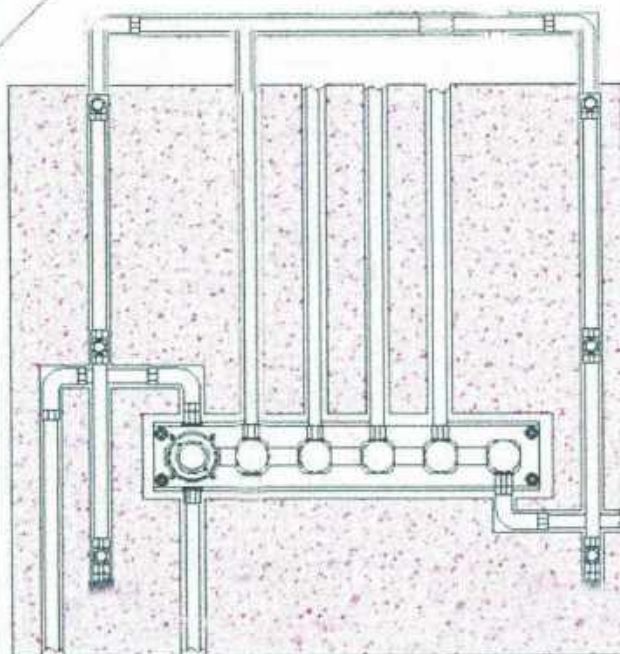



CONNECT ALL THE PIPES AND FLUSH THE PIPEWORK TO REMOVE ANY BLOCKAGES. BEFORE SEALING THE WALL. TEST FOR LEAKS BY TURNING ON THE WATER.

7

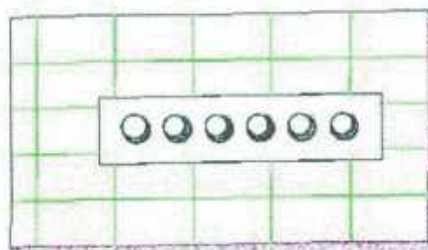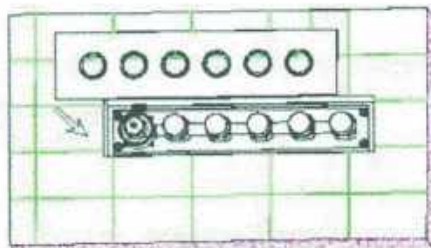

ATTACH THE FACE PLATE ONTO THE VALVE BODY

8

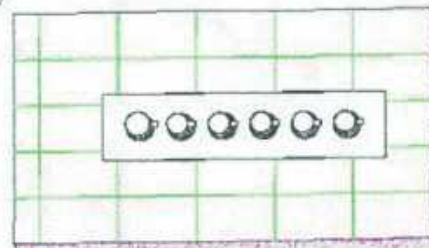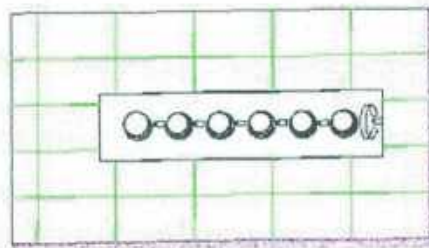


ATTACH THE CONTROL LEVERS

9

temperature controller

mixing water outlet controller

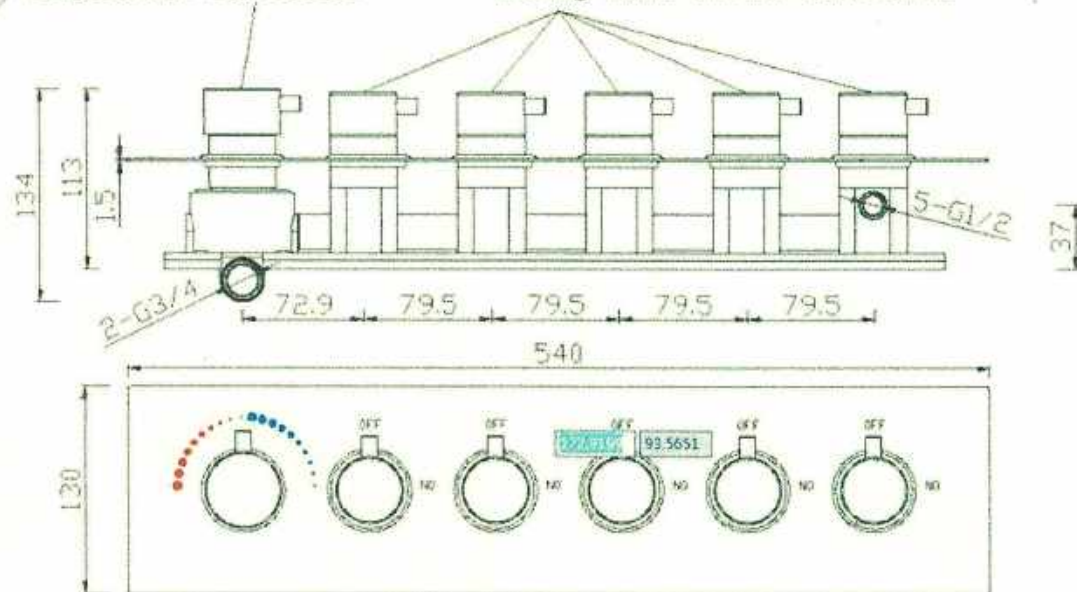

SET UP THE TEMPERATURE AND WATER OUTLET CONTROLLERS AS ILLUSTRATED.

Flow Rate Illustration

