

MODERN FIXED BATH SHOWER SCREEN 10MM GLASS (64G)




livinghouse.co.uk

frameless glass panel fitting instructions


- 1** if using surface channels dry screw the floor channels on to the tiles or dry fix to flat tray edge.

IMPORTANT: all screws in channelling must be counter sunk.

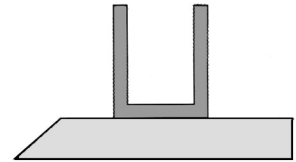


- 2** Insert the rubber cushion into the channels for the panel to rest in. Insert the glass into the floor channels

IMPORTANT: when handling glass ensure all instructions are followed.

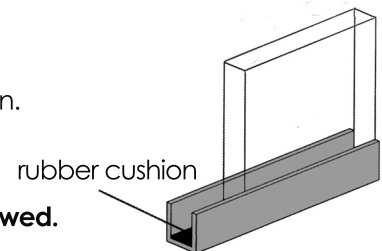



- 3** Dry screw the wall channels into position. Do not use silicone at this stage.

- 4** Slide the panel into the wall channelling, ensuring at least 8mm of the glass is embedded into the channel

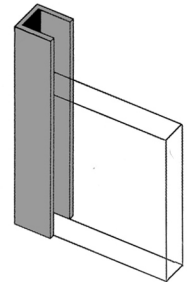

- 5** When satisfied that the glass panel is correctly aligned, unfix the panel and channels. Cut the channels to the correct height and length and silicone into place. Reassemble with silicone.

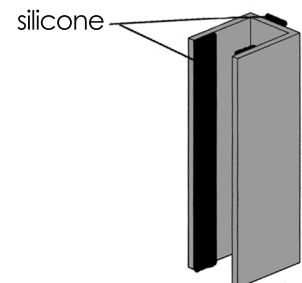

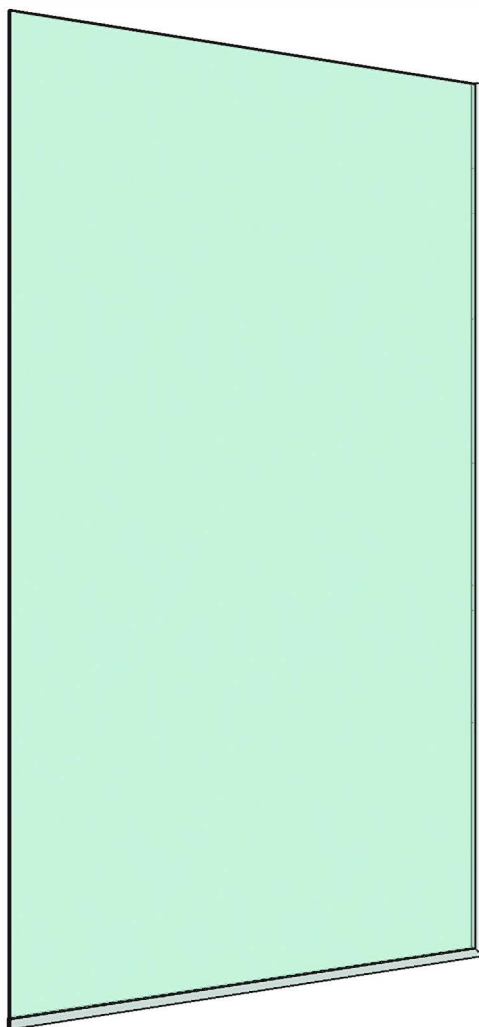

MODERN FIXED BATH SHOWER SCREEN 10MM GLASS (64G)

Maintenance instructions

It is important that regular cleaning of the glass panel and metal channelling is maintained. After shower use wipe down panel and metal trim with a soft cloth.

To not allow limescale to build up in a hard water area.

Use a 50:50 solution of vinegar and water to remove stubborn deposits of limescale.

Glass cleaning products can be used periodically on the glass panel and metal trims if the following guidelines are followed;

- Any cleaning products should have a pH level between 4 & 8 and must be non-abrasive
- Any cleaning products should be wiped down after application
- Do not leave cleaning products on the metal trim as this may *affect* the trim finish.

For more information please contact Livinghouse Email:

sales@livinghouse.co.uk

Tel: 01722 415000