




## frameless glass panel fitting instructions


- 1 if using surface channels dry screw the floor channels on to the tiles or dry fix to flat tray edge.

**IMPORTANT: all screws in channelling must be counter sunk.**

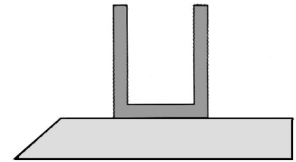


- 2 Insert the rubber cushion into the channels for the panel to rest in. Insert the glass into the floor channels

**IMPORTANT: when handling glass ensure all instructions are followed.**

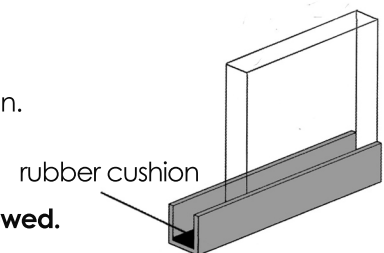

- 3 Dry screw the wall channels into position. Do not use silicone at this stage.

- 4 Slide the panel into the wall channelling, ensuring at least 8mm of the glass is embedded into the channel

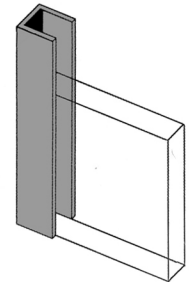

- 5 When satisfied that the glass panel is correctly aligned, unfix the panel and channels. Cut the channels to the correct height and length and silicone into place. Reassemble with silicone.

